

ONTECH®

English



Ontech GSM 9040

Quick Start Guide

Get started with Ontech GSM 9040
and the control panel Ontech Control

Get started:



Insert the supplied SIM card into your unit.



Create your account at www.ontechgsm.com and follow the instructions.

Support:

Help and support can be found at www.ontechgsm.com.

Connect extra units

- 1 Make the settings on the extra unit according to Users Manual.
- 2 Connect the extra unit to the power (Ontech Rtelay 9015 to a wall socket, Ontech 9012 Alarm Box to its battery).
- 3 The unit is shown in Ontech Control.

Connect external temperature sensor

- 1 Remove the unit from the wall socket and then hold the button to both lights go out.
- 2 Connect the external temperature sensor in the socket labeled "Temp" on the underside of the unit.
- 3 Plug the device into the wall outlet. In Ontech Control now displays the temperature of both the internal and the external sensor.

Connect Ontech IR 9016

- 1 Place Ontech IR 9016 as it is directed towards your heat pump or air conditioner.
- 2 Plug the connector into the socket on Ontech 9040 GSM marked "IR".
- 3 In Ontech Control set what kind of brand and model you have.

Connect wired alarms

- 1 Alarm Sensor connects to the supplied alarm cable. A-larm to yellow and red wires and B-alarm to the yellow and green wires.
- 2 Insert the cable on the underside of the Ontech GSM 9040.
- 3 Create the alarm list for who should have the alarm in Ontech Control.
- 4 Activate the alarm in Ontech Control.

Declaration of conformity

Onvako AB, Datavägen 14A, 436 32 Askim, Sweden, hereby declares that the product Ontech GSM 9040 is in conformity with the provisions of the Radio & Teleterminal directive R&TTE 1999/5/EG and the Low Voltage directive 2006/95/EC .

