

# ONTECH®

English



## Ontech 9060

### Quick Start Guide

Get started with Ontech 9060  
and the control panel Ontech Control

## Get started:



Insert the supplied SIM card into your unit.



Create your account at [www.ontechcontrol.com](http://www.ontechcontrol.com) and follow the instructions.

## Support:

Help and support can be found at [www.ontechcontrol.com/support](http://www.ontechcontrol.com/support)

## Connect extra units

- 1 Make the settings on the extra unit according to Users Manual.
- 2 Connect the extra unit to the power (Ontech Rtelay 9015 to a wall socket, Ontech 9012 Alarm Box to its battery).
- 3 The unit is shown in Ontech Control.

## Connect external temperature sensor

- 1 Remove the unit from the wall socket and then hold the button to both lights go out.
- 2 Connect the external temperature sensor in the socket labeled "Temp" on the underside of the unit.
- 3 Plug the device into the wall outlet. In Ontech Control now displays the temperature of both the internal and the external sensor.

## Connect Ontech IR 9016

- 1 Place Ontech IR 9016 as it is directed towards your heat pump or air conditioner.
- 2 Plug the connector into the socket on Ontech 9060 marked "IR".
- 3 In Ontech Control set what kind of brand and model you have.

## Connect wired alarms

- 1 Alarm Sensor connects to the supplied alarm cable. A-larm to yellow and red wires and B-alarm to the yellow and green wires.
- 2 Insert the cable on the underside of the Ontech 9060.
- 3 Create the alarm list for who should have the alarm in Ontech Control.
- 4 Activate the alarm in Ontech Control.

### Declaration of conformity

Onvako AB, Stora Åvägen 21, 436 34 Askim, Sweden, hereby declares that the product Ontech 9060 is in conformity with the provisions of the Radio Equipment Directive RED 2014/53/EU and Low Voltage Directive LVD 2006/95/EC.

### Referensmanual

Complete manual is available in Ontech Control under "Help" or [www.ontechcontrol.com/support](http://www.ontechcontrol.com/support).

